

SWITCHPLATE CONFIGURATIONS

If you need any assistance, please contact us and we will gladly work with you.

S = Toggle

O = Outlet

D = Decora

B = Blank

PC = Phone Cable

PJ = Phone Jack

PB = Push Button

C = Cable



B1



C 3/8"
Cable



PC 5/8"
Phone Cable



PJ 1
Phone Jack